


Cat. No. 15-889 **B**

Roof-Mount Mast Anchor

You can install this mast anchor at the peak of any roof or on a flat roof. The special swivel mast sleeve lets you attach the mast to the mast anchor while the mast is lying flat on the roof. Then, you can raise the mast (and antenna) into position. This reduces the risk of accidents caused by trying to hold the mast upright while performing other tasks.

ASSEMBLE THE MAST ANCHOR

Insert the supplied U-bolt through the two holes in the smaller section of one support, the slots in the mast sleeve, and the two holes in the smaller section of the other support. Then loosely attach a supplied lock washer and nut to each leg of the U-bolt.

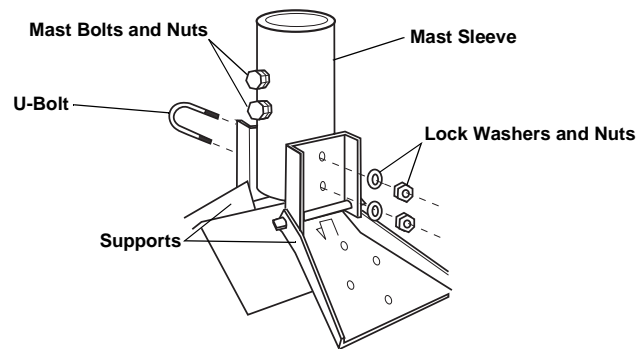


© 1987, 1999 Tandy Corporation.
All Rights Reserved.

RadioShack is a registered trademark used by Tandy Corporation.

ATTACH THE MAST ANCHOR TO THE ROOF

With the sleeve straight up and down, place the mast anchor at the peak of the roof or anywhere on a flat roof. Then attach the supports to the roof, using four lag bolts (RadioShack Cat. No. 15-833) on each side. Be sure the bolts are anchored in solid roof timbers.

ATTACH THE MAST TO THE SLEEVE

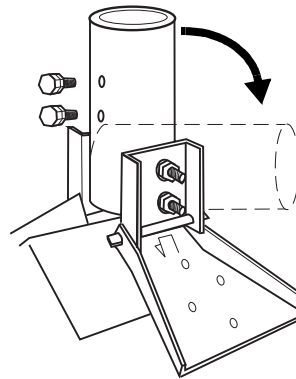

1. Pull the sleeve up and lay it on its side. You might have to loosen the nuts on the U-bolt.
2. With the mast horizontal, insert it into the sleeve until the mast touches the U-bolt.




-
3. Thread the two remaining supplied nuts all the way onto the supplied bolts so that the nuts are against the heads of the bolts.
 4. Insert the bolts into the holes in the sleeve until they hold the mast firmly in place.
 5. Tighten the nuts against the sleeve to lock the bolts in place.


RAISE THE MAST



 1. Attach the antenna to the mast as described in the antenna's installation instructions.
2. Using both hands, raise the mast (and antenna) to a vertical position. Then, lower the mast so that the lower slot in the mast sleeve slides over the U-bolt.
3. Securely tighten the nuts on the U-bolt.



 Note: Install guy wires if you are using a mast longer than five feet. Visit your local RadioShack store for the necessary materials and instructions.



Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

04/99

RadioShack
A Division of Tandy Corporation
Fort Worth, Texas 76102

06/99

Printed in the USA